


Wherever possible, use a mains powered energiser.  
*(no batteries to service or go flat)*

Maintain the current on the fence 24 hours per day at all times.

The type of energiser required depends on the fence length.

Earth stake should be positioned near to the fence and at least 10 m away from any electricity supply.

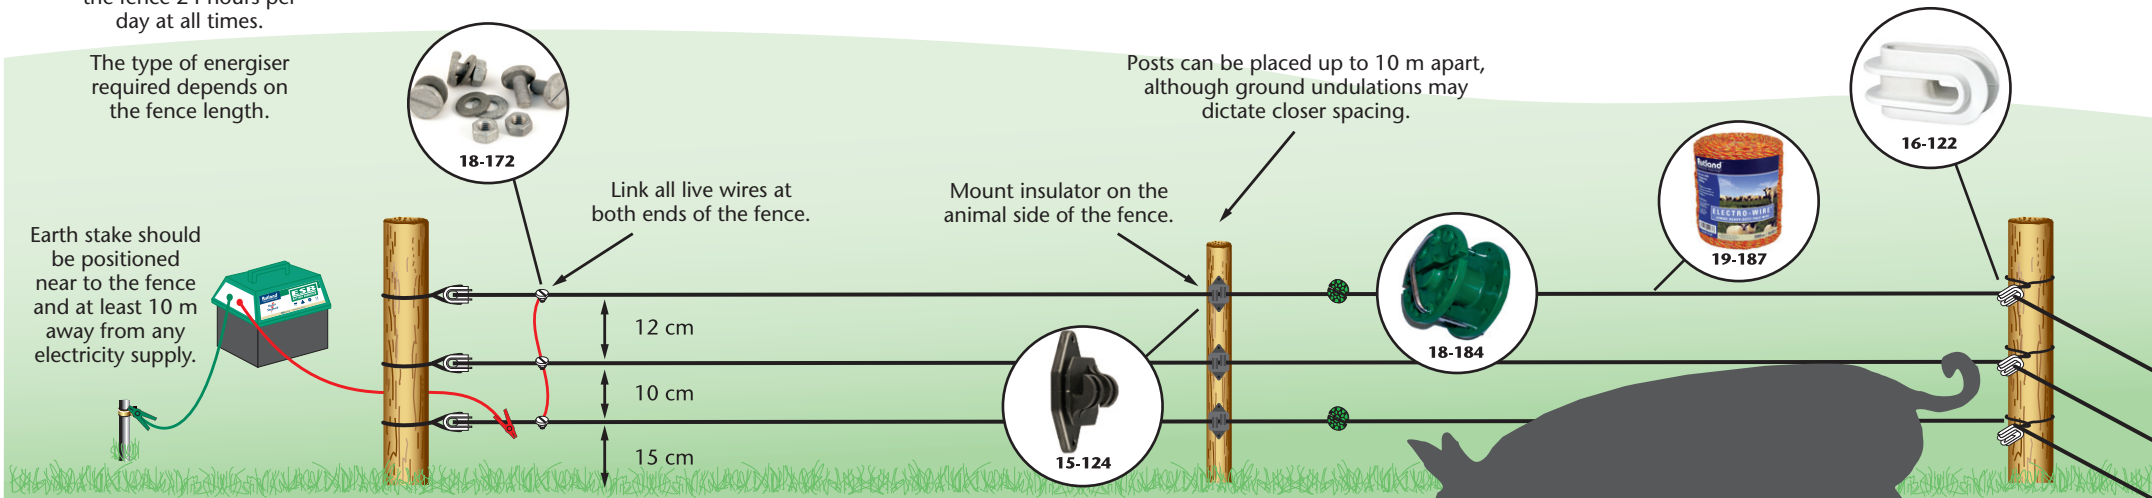

### Recommended List of Rutland Electric Fencing Components

Item	Description	REF Part No
Lead Out Cable	Use to connect live and earth wire on fence	17-128
Fence Line Wire Clamps	Use to attach lead out cable to fence line	18-172
Jumbo Electro-Wire	500 metre spool of electric fence poly wire	19-187
Treated Wood Posts	Use to create perimeter and wire spacing	N/A
Heavy Duty Insulators	For attaching fence line to wood posts	15-124
Strain Insulator	Use on end/corner posts to secure fence line	16-122
Strainers	For removing slack from the fence line	18-184

Monitor the fence voltage regularly and ensure it is a minimum of 3000 volts at all points on the fenceline.

Test the earth system regularly and ensure a maximum of 400 volts. If greater than this, add more earth stakes until it is brought down.

Use a quality tester to check fence and earth voltages such as 14-172.